

**QUIC-RELEASE® FIRE EXTINGUISHER HOLDER - 5 LB.
MODEL QR-FEH-1-_
PARTS AND INSTRUCTION MANUAL**

Safely store a fire extinguisher inside or outside of the crew area with this SAE-J3043 compliant bracket.

Features:

- Designed, engineered, and tested specifically for use in ambulances and other moving vehicles, better protecting both patients and personnel
- Two-piece adjustable bracket secures one 5 lb. fire extinguisher. See Table 1(below) for current models available
- Band clamp firmly hugs the cylinder with virtually no rattle
- Quick-release buckle allows for fast and easy access to the extinguisher
- Specially-designed pull pin ensures latch stays closed for maximum cylinder security
- Soft foam pads protect and cushion cylinder
- Easy to clean and disinfect—no fabric to harbor bloodborne pathogens
- Easy to visually and physically inspect fire extinguisher
- Mounts horizontally or vertically to any flat surface
- Third-party tested to exceed safety standards

Specs:


- Stainless steel
- 12 1/4" or 13 3/4" L x 3" W x 4 1/8" D (not including fire extinguisher)
- Complies with SAE-J3043, AMD 028-2024, NFPA, and GSA KKK specification when used as recommended.
- Complies with OSHA and insurance safety regulations.
- Weight 2.45 Lbs (not including fire extinguisher)

Important: If a specific fire extinguisher is not listed in Table 1, contact Ziamatic to determine whether the fire extinguisher secured by the QR-FEH-1 bracket complies with SAE J3043 recommended practices.

MODEL	EXTINGUISHER BRAND & MODEL
QR-FEH-1-A	Amerex B500
QR-FEH-1-B	Badger 5MB-6H Buckeye 5 HI SA40
QR-FEH-1-F	First Alert FE3A40GR
QR-FEH-1-K	Kidde Pro Series 340
QR-FEH-1-S	Sentry AA05S-1
QR-FEH-1	Not Preset, Adjust as Required

TABLE 1



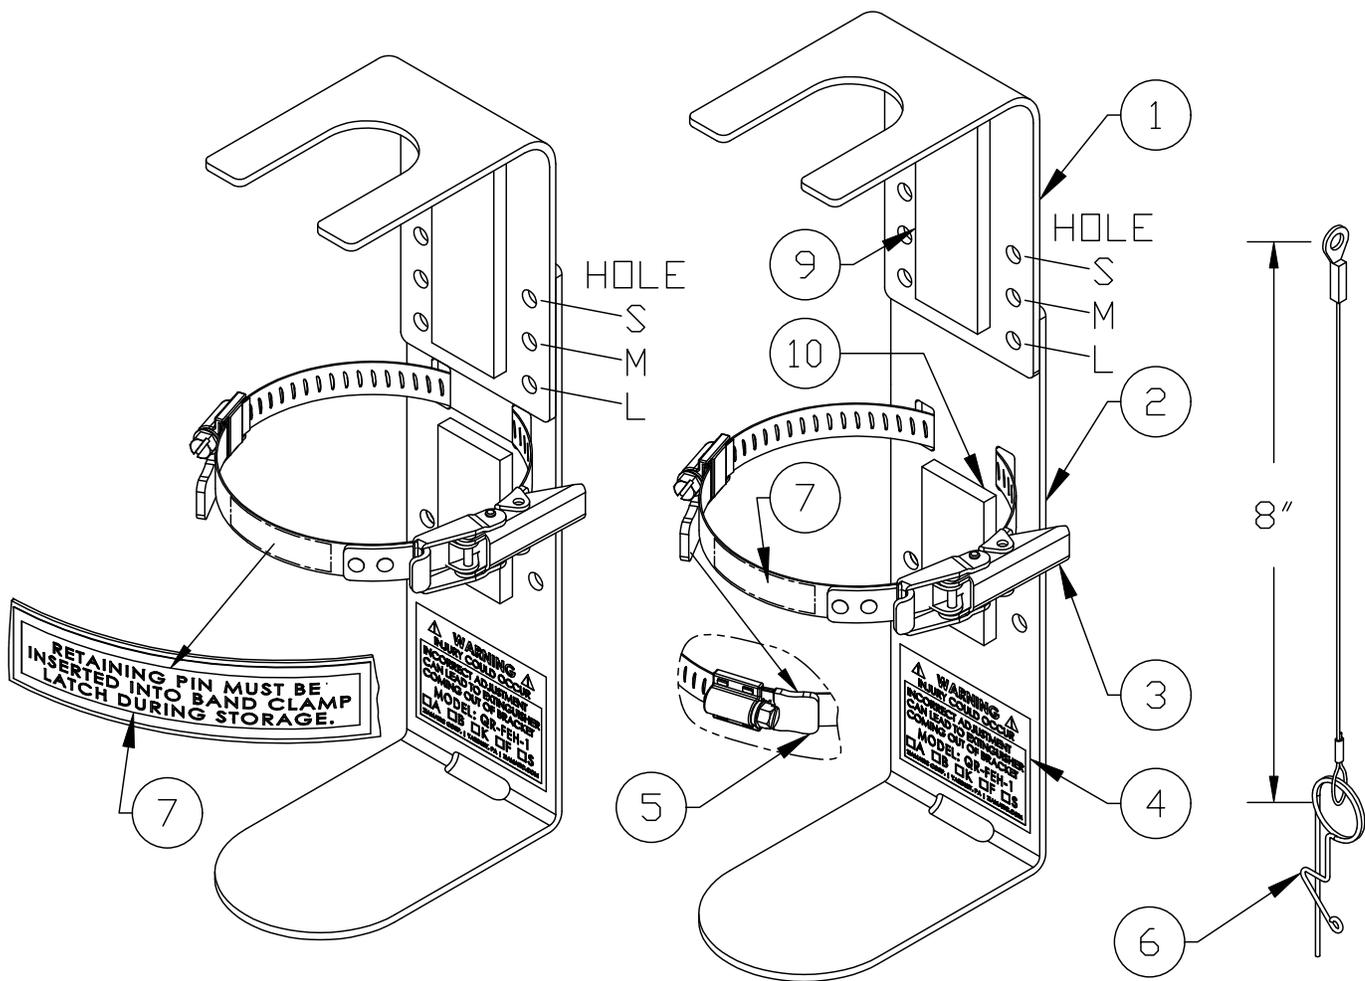

S = 12 1/4" x 3" x 4 1/8"

L = 13 3/4" x 3" x 4 1/8"

Dimensions do not include overall dimensions of the fire extinguisher.

M = 13" x 3" x 4 1/8" (NOT SHOWN)

FIGURE 1



3030-300-111



3030-300-119

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	3030-300-105	RETAINER BRACKET	1
2	3030-300-101	BASE BRACKET	1
3	3030-300-107	BAND CLAMP	1
4	3030-300-111	LABEL, MODEL QR-FEH-1-(MODEL BOX PUNCHED)	1
5	3030-300-113	BAND CLAMP CAP	1
6	3030-300-117	RETAINING PIN / LANYARD ASSY	1
7	3030-300-119	LABEL, RETAINING PIN	1
9	3030-300-121	FOAM PAD, 3-3/4" x 1-1/4" x 1/4"	1
10	3030-300-123	FOAM PAD, 2-1/2" x 1/1/4" x 1/4"	1

TABLE 2

Mounting Instructions:

WARNING:

QM-FEH-1 is to be secured with a minimum four Grade 5, 1/4" fasteners with washers (*Not supplied*). Failure to do so may result in non-compliance with safety standards.

WARNING: Be careful not to kink the Band Clamp (3) during mounting procedures.

1. To select the proper mounting hole set for your particular extinguisher, consult Figure 1 (*Page 2*) & Table 3 (*below*).
2. Mount horizontally or vertically at four points to any flat surface using a minimum of Grade 5, 1/4" fasteners with washers (see Fig 2 & 3) (*Not supplied*). Failure to meet these requirements may result in non-compliance with safety standards.

MODEL	EXTINGUISHER	MOUNTING HOLE
QR-FEH-1-A	AMEREX B500	S
QR-FEH-1-B	BADGER 5MB-6HB	S
QR-FEH-1-B	BUCKEYE 5 HI SA40	M
QR-FEH-1-F	FIRST ALERT FE3A40GR	S
QR-FEH-1-K	KIDDE PRO SERIES 340	L
QR-FEH-1-S	SENTRY MODEL AA05S-1	L

TABLE 3

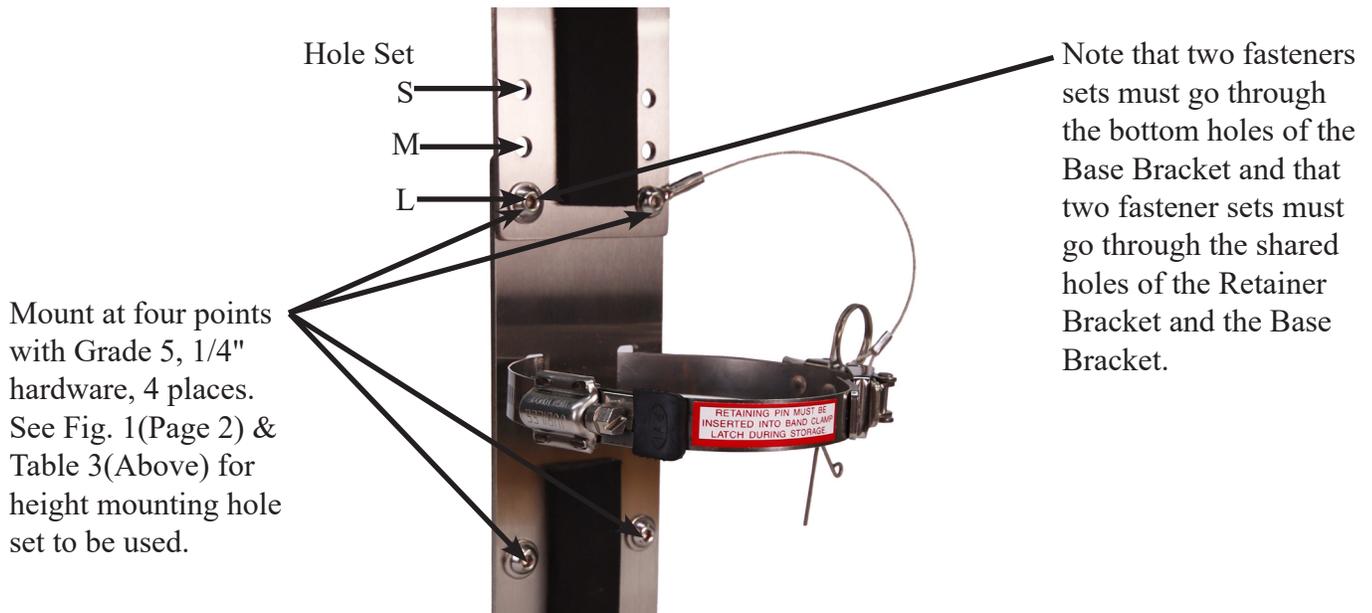


FIGURE 2

Band Clamp Adjustment Instructions:

WARNING: Preset Models: The Band Clamp (3) is factory set to a specific extinguisher model that was specified during the ordering process. Do not adjust the Band Clamp adjustment screw unless a different diameter extinguisher is used or if the clamp feels loose.

Important: Incorrect adjustment can lead to the extinguisher coming out of the bracket.

Instructions for Band Clamp(3) adjustment or for changing to a different diameter fire extinguisher.

1. Place the extinguisher into the bracket.
2. Latch the Band Clamp(3) and slide the Retaining Pin(6) into the Band Clamp.
3. Tighten the Band Clamp screw so that it fits firmly around the body of the extinguisher.
4. Check for functionality by following the Operation Instructions for proper use of stowing and retrieving the extinguisher.
5. Adjust the Band Clamp again if necessary.



FIGURE 3

SLIDE RETAINING PIN
THROUGH HOLE IN BAND
CLAMP LATCH TO SECURE.



FIGURE 4

Operation Instructions:

1. To stow the extinguisher:

- Place the extinguisher against the Base Bracket (2), inside of the Band Clamp (3) and resting on the footplate. The neck of the extinguisher should sit fully inside the Retainer Bracket (1).
- Hook together and fully close the Band Clamp latch. Slide the Retaining Pin (6) through the small hole in the Band Clamp latch to secure. Failure to use the Retaining Pin may result in non-compliance with safety standards. See Figure 4(above)

2. To retrieve the extinguisher:

- Remove the Retaining Pin (6) and open the Band Clamp (3) latch.
- Pull extinguisher free from the Retainer Bracket (1).



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

www.ziamatic.com

TOLL FREE: 800-711-3473

Copyright Ziamatic Corp. 2-20