
SURE-GRIP XLTM Tool Mounts - 2" to 4" Dia. Models SG-VM-XL & SG-VM-XLS Parts and Instruction manual


ZICO[®] 3085PM3


REV. 4-7-21

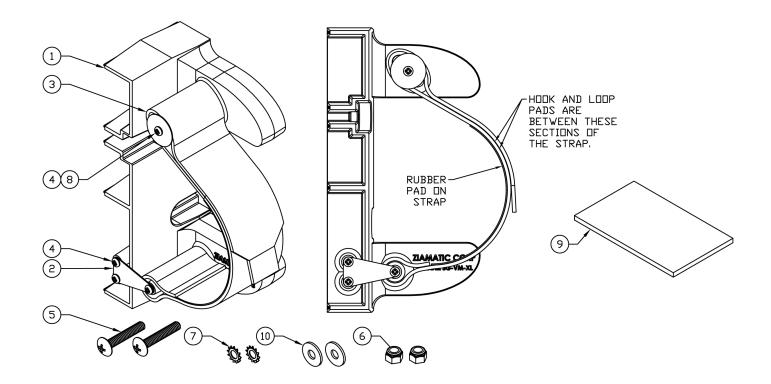


MODEL	DESCRIPTION	WT./@ IN LBS.
SG-VM-XL	SURE-GRIP XL Bracket - 3" - 4" Dia. grip range	.90
SG-VM-XLS	SURE-GRIP XL Bracket - 2" - 3" Dia. grip range	.90

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	3085-505-105	SURE GRIP BASE	1
2	3085-505-107	STRAP PLATE	1
3A	3085-505-109	STRAP, STANDARD 19" L	1
3B	3085-510-109	STRAP, SHORT 15.5"	1
4	9125-191306	SCREW, #6-20 x 3/8", PLASTIC THREAD CUTTING, SS, 94629A70	4
5	9010-262528	SCREW, 1/4-20 x 1 3/4" TRUSS HEAD ZPS	2
6	9013-172500	NUT, 1/4-20 HEX HEAD, LOW-PRO NYLON LOCK, ZPS	2
7	9014-262500	LOCK WASHER, 1/4" EXTERNAL TOOTH, ZPS	2
8	9014-161600	FENDER WASHER, #8 X 1.000 O.D. ZPS	1
9	3085-505-901	PAD WITH ADHESIVE, 3" x 4"	1
10	9014-112500	FLAT WASHER, 1/4" ZPS	2

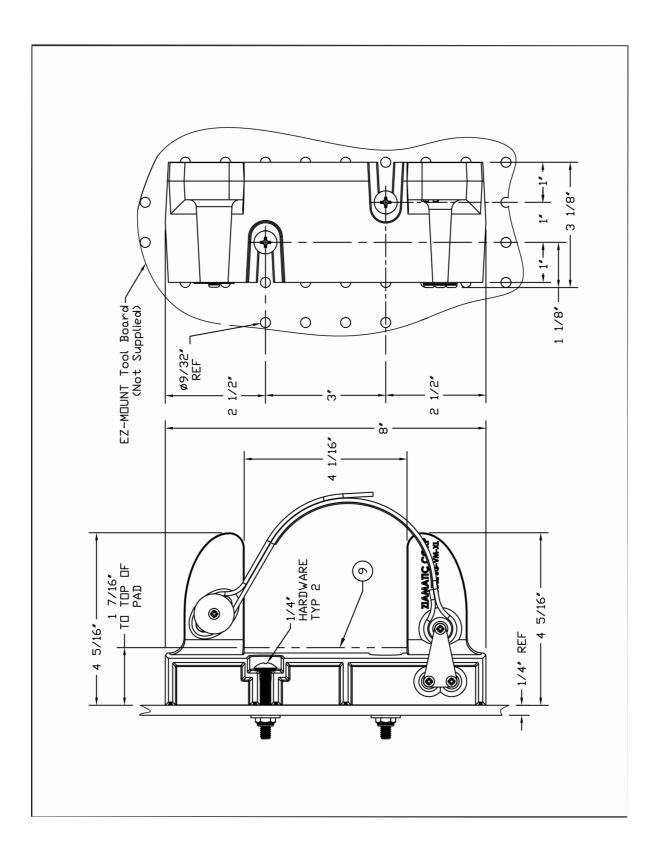

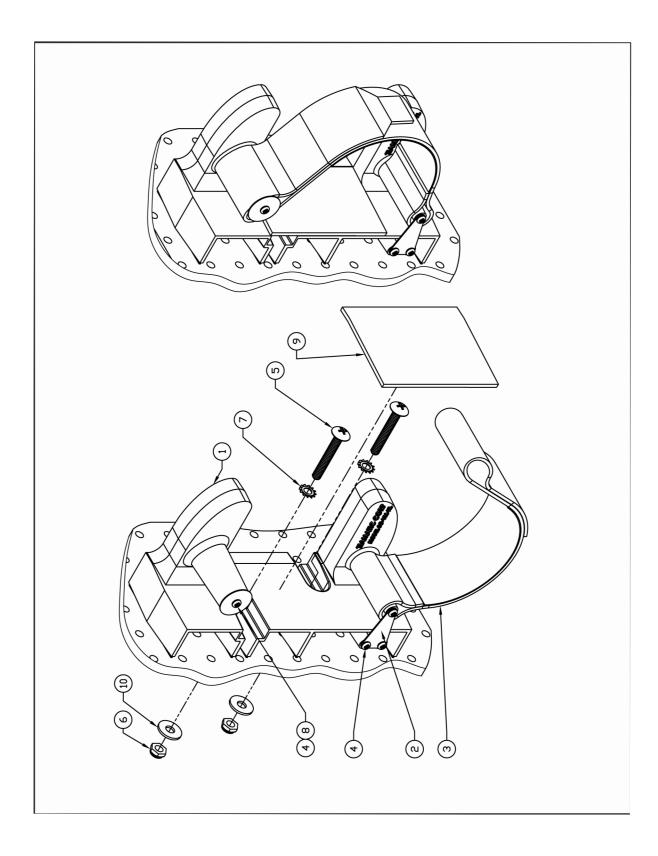

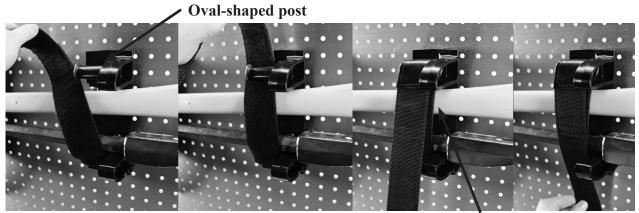

Note: Part numbers in parentheses (see Page 1).

Hook & loop pads

I. INSTALLATION

- 1. The support arm on the Base (1) should be positioned toward the bottom of the compartment, in both horizontal and vertical storage configurations.
- 2. When using two SURE-GRIP mounts to secure one tool, it is suggested to space the mounts approximately shoulder-width apart to allow for quicker and easier operation
- 3. Attach Base to mounting surface using Truss Head Screws (5) combined with 1/4" nuts (6) and washers (7)(10). Use longer screws if needed.
- 4. Adhere the Pad (9) to the flat portion of Base (see Page 3).

II. <u>SECURING THE TOOL</u>

- 1. Place and hold the tool against the Base. When in a horizontal configuration, support arm may be used for assistance and stability.
- 2. Place the Strap (3) over the tool. Slide it behind the oval-shaped post from the side (see above).
- 3. While maintaining tension on the strap, pull away from the Base to tighten, then connect the hook pad and the loop pad to secure.

III. REMOVING THE TOOL

- 1. Grab the end of the strap at the red tab and pull away from the base to release the hook & loop connection.
- 2. Pull the tool towards you, through the loosened strap. Strap will free itself as you pull.



www.ziamatic.com Ziamatic Corp. TOLL FREE: 800-711-3473 10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401 *ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp. **Copyright Ziamatic Corp. 4-21**