

QUIC-STEP™ RETRACTABLE VEHICLE STEP Model VS-24-9

ZICO®
3094PM4i

Rev. 7-20-23

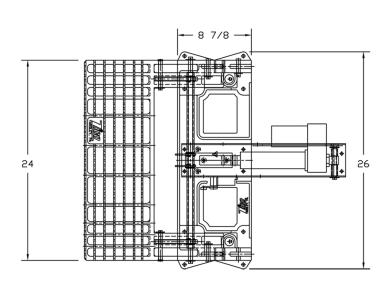

PARTS AND INSTRUCTION MANUAL

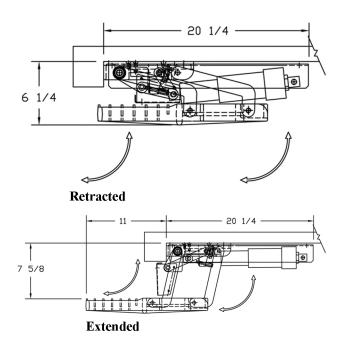

Designed specifically for use on fire and emergency vehicles. May be retrofitted onto existing apparatus.

Cast aluminum step plate 24" wide x 8-3/8" deep with a non-skid surface to provide traction and safety.




Powered by a single 12-volt electric actuator. Includes a patent pending in-line locking mechanism to hold the extended step rigidly in place.


Step may be wired into door interlock system to automatically extend with door opening and retract with door closing.

Meets NFPA 1901-09 requirements for slip resistance and static load.

MODEL	DESCRIPTION	WT./@ IN LBS.
	Retractable Vehicle Step	64.0

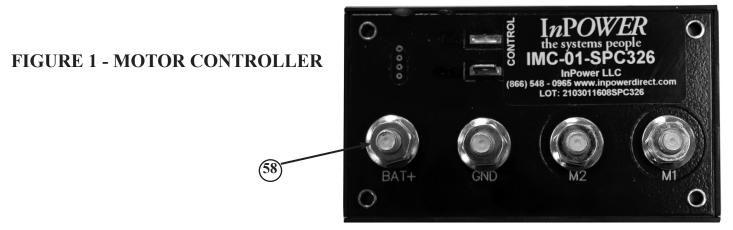

Part# 3094-005-195

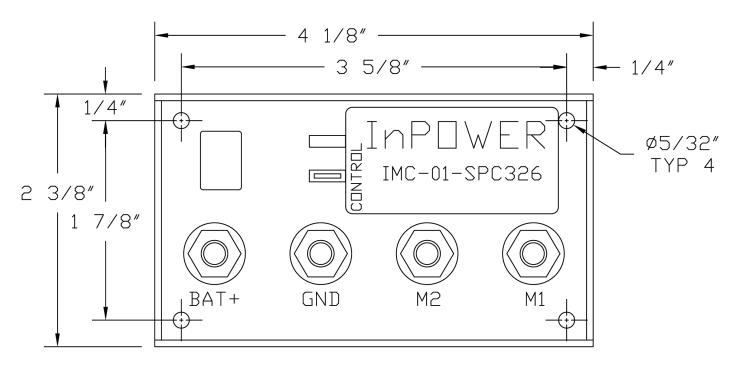

Mount in weather-tight location

Mounting Details

CHART FOR N.C. SWITCH

DOOR	SWITCH	ACTUAT	OR POL	ACTUATOR	STEP
OPEN	CLOSED	M1 +	M2 -	EXTEND	GO DOWN
CLOSED	OPEN	M1 -	M2 +	RETRACT	GO UP

NOTE: REVERSE ACTUATOR MOTOR POLARITY ON INPOWER MODULE (M1 & M2) IF DOOR SWITCH IS A N.O. SWITCH

CONTOL LOGIC

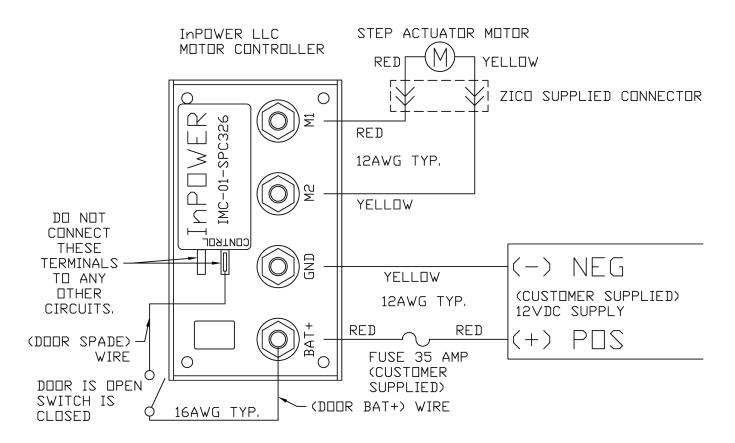


FIGURE 2 - FIELD WIRING DIAGRAM



WARNING



ELECTRICAL SHOCK
OR
CRUSHING INJURY
DISCONNECT FROM POWER
BEFORE SERVICING

Failure to do so could result in serious injury or death

Part# 3094-005-1901

Note: Switch and electrical panel should be mounted in waterproof compartments. Once all electrical connections are complete and system has been tested, protect connections with a weather proofer like liquid tape.

MODE OF OPERATION

PROVIDE POWER TO AUTOSTEP

EXTEND MODE:

- STEP WILL AUTOMATICALLY EXTEND AS SOON AS THE DOOR IS OPENED.
- STEP WILL REMAIN EXTENDED AS LONG AS DOOR REMAINS OPEN.

RETRACTED MODE:

- STEPWILLAUTOMATICALLYRETRACTAS SOON AS THE DOOR IS CLOSED.
- STEPWILLREMAINRETRACTEDASLONG
 AS DOOR REMAINS CLOSED.

CHART 1

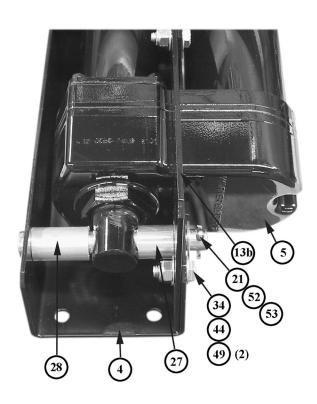


FIGURE 3 - ACTUATOR



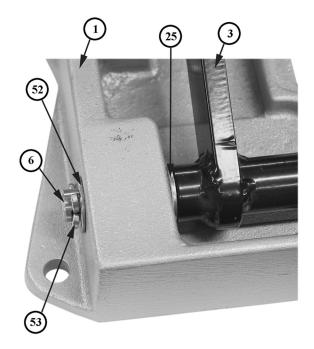



FIGURE 4 - TORQUE TUBE

	1		1
ITEM	PART NO.	DESCRIPTION	QTY.
1		BASE CASTING	1
2		STEP CASTING VS-24-9	1
3		TORQUE TUBE WELDMENT	1
4		ACTUATOR ATTACH. BRACKET	1
5		LINEAR ACTUATOR	1
6		SHAFT, 1/2ø x 24"	1
7		SLAVE ARM	2
8		SHORT LINK	2
9	3094-005-121		2
10		KICK PANEL	1
11		KICK PANEL BRACKET	1
12		MOUNTING BLOCK, LINKAGE	1
13a		STIFFENING PLATE A	1
13b	3094-005-138	STIFFENING PLATE B	1
15	3094-005-143	SPACER PLATE	1
17	9110-313116	SHOULDER SCREW, 5/16-18 x 1 S/S	2
18	9010-315032	SHOULDER SCREW, 1/2 - 13 x 2/3/8-16TH.	1
19	3094-005-180	SPRING BUMPER, STOW	2
20	9080-003136	CLEVIS PIN, 5/16 x 2-1/4	2
21	9080-005064	CLEVIS PIN, 1/2ø x 4	1
22	9080-003730	CLEVIS PIN, 3/8 x 1-7/8	1
24	9080-004332	CLEVIS PIN, 7/16 x 2	4
25	3094-005-182	BUSHING SHAFT, .500 ID x 5/8 OD, .1 FL, BRONZE	2
26	3094-005-184	SLEEVE, 3/8 ID x 5/8 OD x 1.625 LG., SS	1
27	3094-005-186	SPACER, .75 OD, .781 LG. x .083 WALL, ALUM. TBG.	1
28	3094-005-188	SPACER, .75 OD x 1.25 LG. x 083 WALL, ALUM. TBG.	1
30		CLEVIS PIN, 7/16 x 3-1/2	2
32	9113-171900	HEX NUT, 10-24, ESNA LOCKNUT S/S	6
33	9113-172500	HEX NUT, 1/4-20, ESNA LOCKNUT S/S	10
34	9018-173100	HEX NUT, 5/16-18, ESNA LOCKNUT GR. 8	6
35	9018-173700	HEX NUT, 3/8-16, ESNA LOCKNUT GRD. 8	2
41	9110-221912	SCREW, #10-24 x 3/4, PHIL. PAN HD. S/S	6
42	9110-102512	SCREW, 1/4-20 x 3/4, HEX HD. S/S	4
43	9110-102516	SCREW, 1/4-20 x 1, HEX HD. S/S	4
44	9018-363116	SCREW, 5/16-18 x 1, FLAT HD. SOCKET GR. 8	6
45	9018-103740	SCREW, 3/8-16 x 2-1/2, HEX HD. GR. 8	1
47	9114-101900	WASHER #10 NOM S/S	6
48	9114-112500	WASHER, 1/4ø NOM. S/S	14
49	9114-113100	WASHER, 5/16ø NOM. S/S	6
50	9114-113700	WASHER, 3/8ø NOM. S/S	8
51	9014-114300	WASHER, 7/16ø NOM	6
52	9114-105000	WASHER, 1/2ø NOM. S/S	4
53	9170-001212	COTTER PIN, 1/8 x 3/4 S/S	11
54	9110-363112	SCREW, 5/16-18 x 3/4, FLAT HD. SOCKET S/S	
55	9014-133700	WASHER, 3/8ø NOM. GR.8	2
58		INPOWER CONTROL MODULE	2
60		SERIAL NUMBER LABEL	1
		DRIVE SCREW #4 x 3/16 TYPE U	1
61	10120-101102		
61 62	9120-101103	WARNING LABEL, ELECTRICAL SHOCK	2

FIGURE 5 - ACTUATOR RETAINER BRACKET

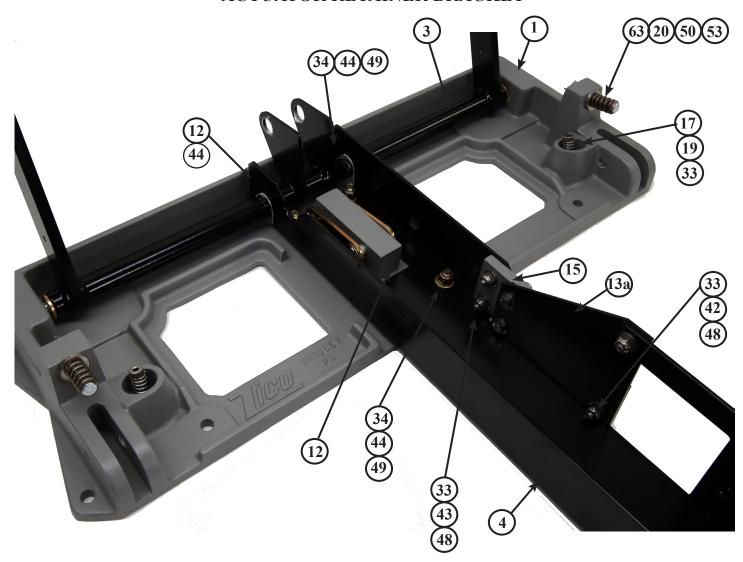

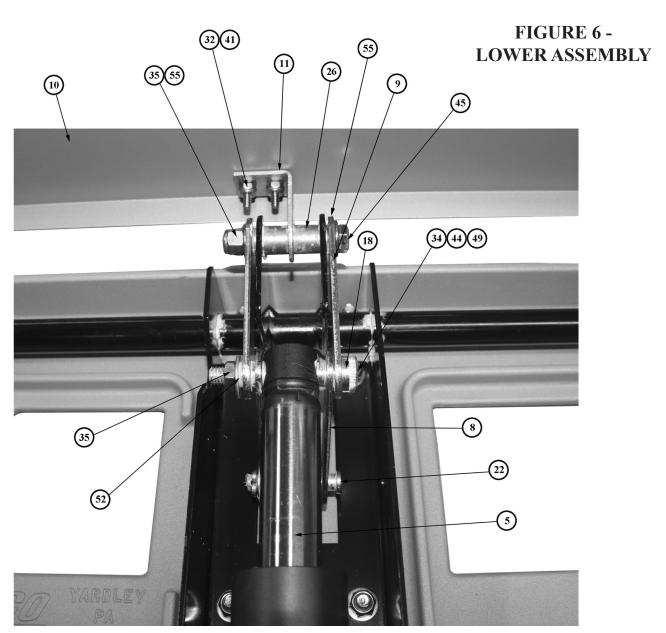

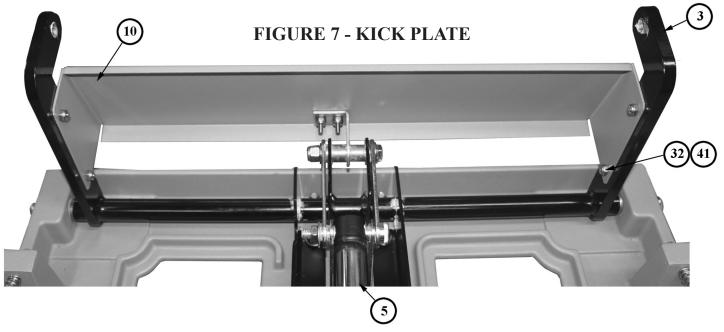

Page 6


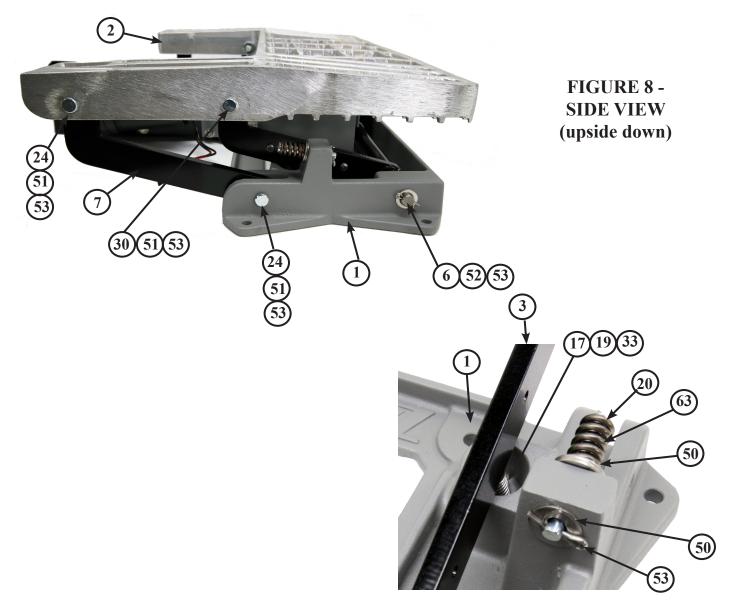


FIGURE 9 - SPRINGS

FIGURE 10 - TOPSIDE OF BASE

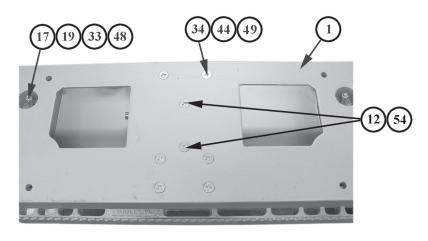

Page 7

SERIAL NUMBER

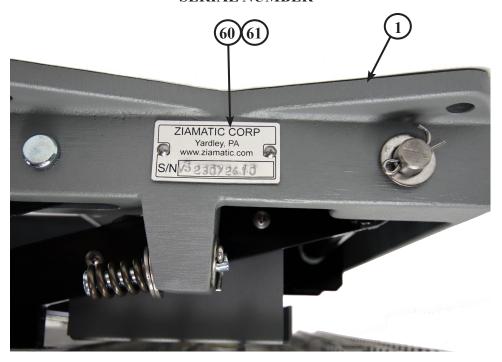


FIGURE 11 - SERIAL NUMBER LABEL

Mounting to Apparatus

- A. A 7-1/16" center to center hole pattern is provided in the side flanges of the base casting. Additional holes may be added as needed.
- B. 3/8" diameter (Grade 5 or better) mounting hardware, a minimum of four, is required (Not supplied).
- C. The apparatus structure that the step is mounted to must be strong enough to support 500 lbs. on the extended step.

Maintenance

- A. Semi-Annually or at Scheduled Apparatus Lube Service
 - 1. Visually inspect step for excess dirt build-up and debris.
 - 2. Lubricate all joints and pivots with CRC Stor & Lube long-term lubricant and rust preventative #03032. Excess lubrication should be wiped off.
 - 3. Electric Actuator We suggest the exposed shaft be cleaned and sprayed with WD40 or a similar light, moisture-repelling silicon type lubricant.
- B. Pressure Washing

Do not operate pressure washer around or near electric actuators. Excessive pressure may allow soap and water to blow past the seal, damaging the actuator.

Ziamatic Corp.

www.ziamatic.com TOLL FREE: 800-711-3473

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Copyright Ziamatic Corp. 6-21

WARRANTY REGISTRATION

PLEASE MAIL OR FAX A COPY TO ZICO TO REGISTER YOUR UNIT

FIRE DEPARTMENT NAME:		CONTACT PERSON:	
PHONE NO.	FAX NO.		
STREET ADDRESS:		P.O <u>. BOX:</u>	
CITY:	STATE:	ZIP:	
UNIT MODEL NO.:			
SERIAL NO. ON UNIT: (SEE PAGE 8	FOR LOCATION)		
INSTALLED ON: (VEHICLE MFG.)		DELIVERED: (DATE	
WAS UNIT INSTALLED ON:	NEW VEHICLE		
	RETROFITTED ONTO EX	ISTING VEHICLE	
WHERE DID YOU HEAR ABOUT OU	R PRODUCT?		
MAGAZINE AD (SPECI <u>FY)</u>			
DEALER (SPECIFY)			
VEHICLE MFG. (SPECIFY)			
ANOTHER DEPARTMENT	(SPECIFY)		
OTHER (SPECIFY)			