


QUIC-MOUNT® DOUBLE EXTRICATION TOOL HOLDER
MODEL QM-ETD-1
PARTS AND INSTRUCTION MANUAL

The QM-ETD-1 holds two (2) extrication tools securely upright in the compartment.



Fully adjustable, the various components slide to fit your individual tool for a most secure fit.

Made with heavy-duty, lightweight aluminum.


Mounts to virtually any flat surface.

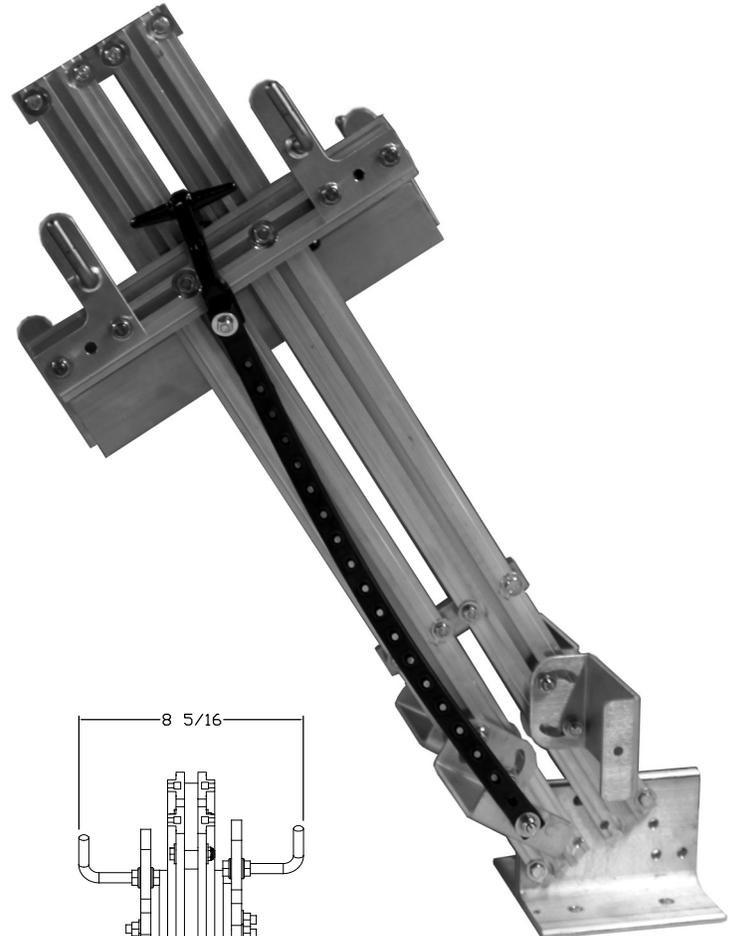

MODEL	DESCRIPTION	WT./@ IN LBS.
QM-ETD-1	Double Extrication Tool Holder	14.2

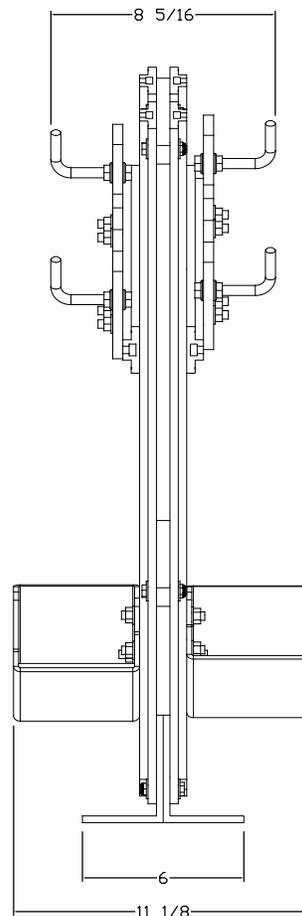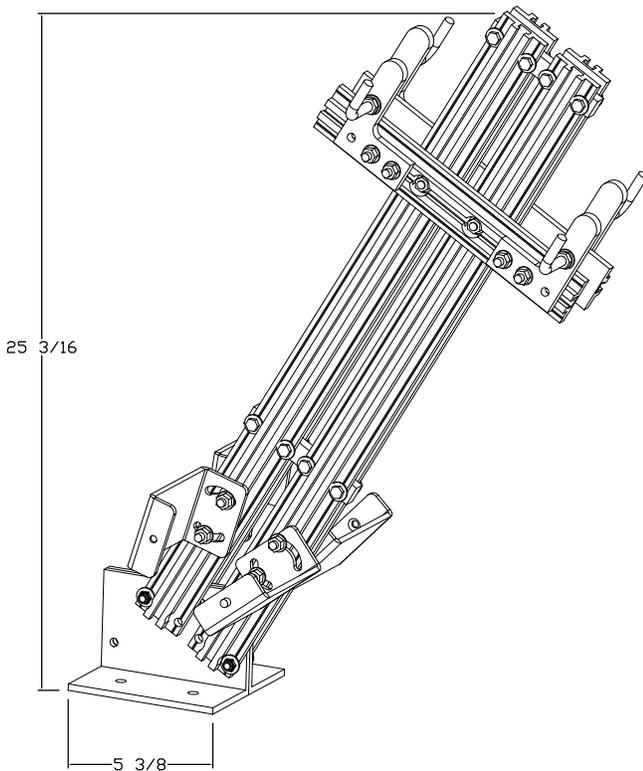

Parts Diagram/Breakdown - QM-ETD-1

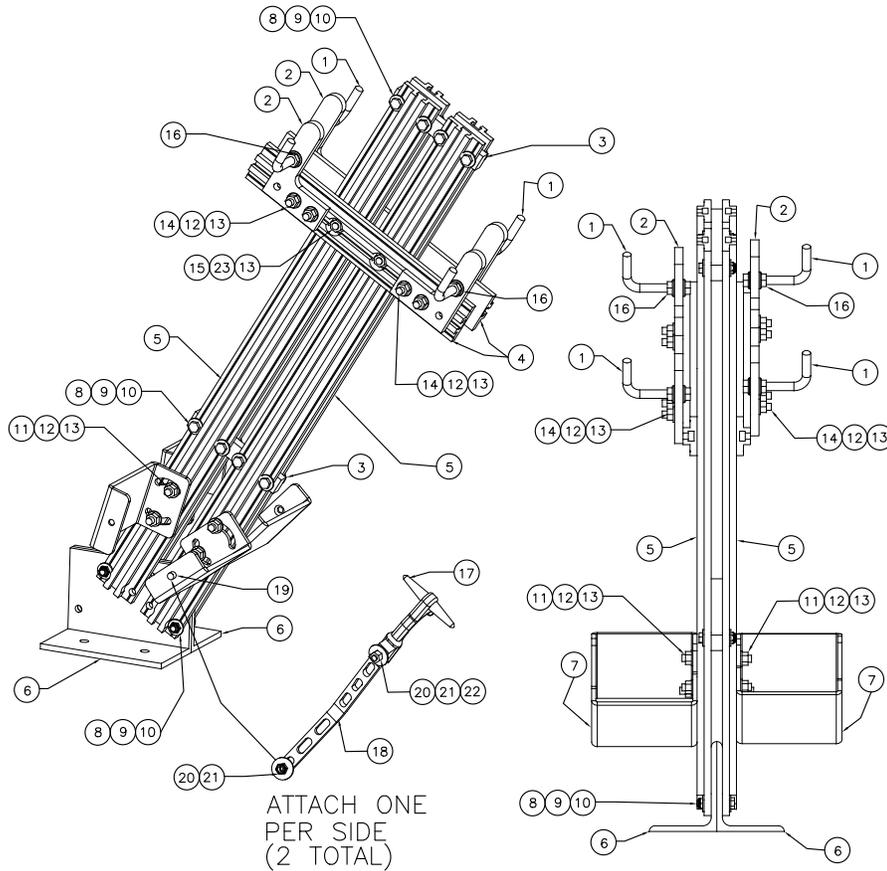


ITEM #	PART #	DESCRIPTION	QTY.
1	3095-246-101	QMT-ETD Hanging Post	4
2	3095-246-103	QM-ETD Hang Bracket	4
3	3095-246-105	QM-ETD Spacer Plate	2
4	3095-246-107	QM-ETD Channel Short	2
5	3095-246-109	QM-ETD Channel Long	4
6	3095-246-111	QM-ETD Base Angle	2
7	3095-239-103	Hanging Angle Univ.	4
8	9010-102524	1/4-20 x 1.5" Hex Bolt ZPS	10
9	9014-112500	1/4" Washer ZPS	20
10	9013-172501	1/4-20 Low-Profile Nylock Nut	10
11	9010-343116	5/16-18 x 1" Sq Bolt ZPS	8
12	9014-183100	5/16" Washer ZPS - Grade 8, Xtra Thick	16
13	9013-173100	5/16-18 Nut Nyloc	20
14	9010-343120	5/16-18 x 1.25" Sq Bolt ZPS	8
15	9010-343112	5/16-18 x .75" Sq Bolt ZPS	4
16	9013-373700	3/8-16 Serrated Flanged Nut	8
17	3095-215-109	Strap Handle	2
18	3095-215-107	EPDM Rubber Strap	2
19	9010-162516	1/4-20 x 1" FH Screw	2
20	9013-172500	1/4-20 Nyloc Nut, ZPS	4
21	9014-162500	1/4" Wide Washer	4
22	9010-102520	1/4-20 x 1-1/4" Hex Head Bolt, ZPS	2
23	9014-133100	5/16" Washer ZPS, Grade 8	4

Adjustment Instructions:

Note: Part numbers in parenthesis (see Page 2)

Set-up: Adjustment is most easily accomplished with the QM-ETD-1 out of the compartment and in full upright position (as shipped).

1. Loosen 5/16-18 x 1" sq. bolts (11) on Hanging Angle Brackets (7). Adjust brackets until they rest flush against the blade-end of your tool. Re-tighten bolts.
2. Loosen 5/16-18 x .75" sq. bolts (15) on Short Channel (4). Adjust Short Channel up or down to accommodate height of your tool. Re-tighten bolts.
3. Loosen 5/16-18 x 1.25" hex bolts on Hang Bracket (2). Slide in or out to accommodate size and shape of tool handle. For wider handles, reverse the Hang Brackets (see below). Re-tighten bolts.

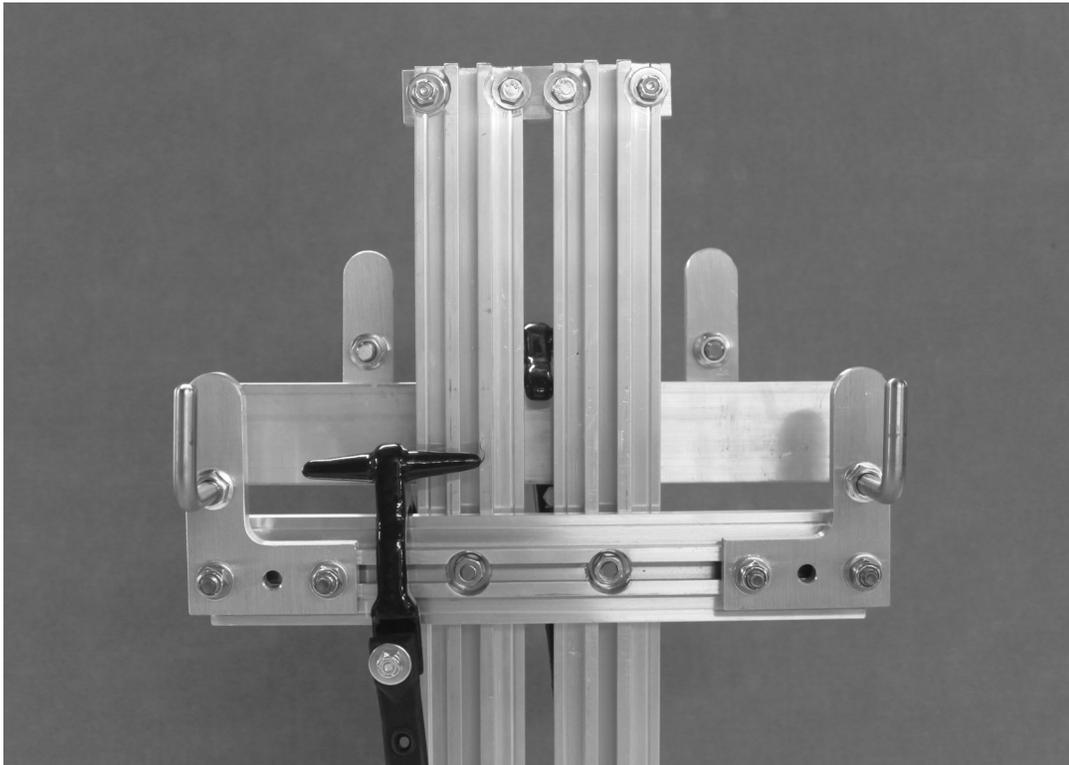

4. Adjust Rubber Strap (18) so that Strap Handle (17) grips tool handle tightly.

After both sides of bracket have been adjusted to fit desired tools, you may adjust tilt angle by removing 1/4"-20 x 1.5" hex bolts (8) and hardware on one side of the Base (6) and repositioning Long Channel (5). Re-tighten hardware via appropriate holes in Base after achieving desired tilt.

Mounting Instructions:

Mount at four points using 3/8" hardware (not included).



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

www.ziamatic.com

TOLL FREE: 800-711-3473

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Copyright Ziamatic Corp. 2-17