


LOCATOR BUMPER SPACER KIT FOR 5.5 CYLINDER INSTALLATION INSTRUCTIONS

For use with 30 min. 5500 PSI air cylinders in the EZ-LOC, QUIC-LOCK, and Hands-Free Electric SCBA brackets.

Stacks between standard Locator Bumper Spacer and backplate to better accommodate the 5.5 cylinder's thinner shape and achieve maximum locking efficiency.

Note: 45 min. and larger 5.5 cylinders do not require this kit.

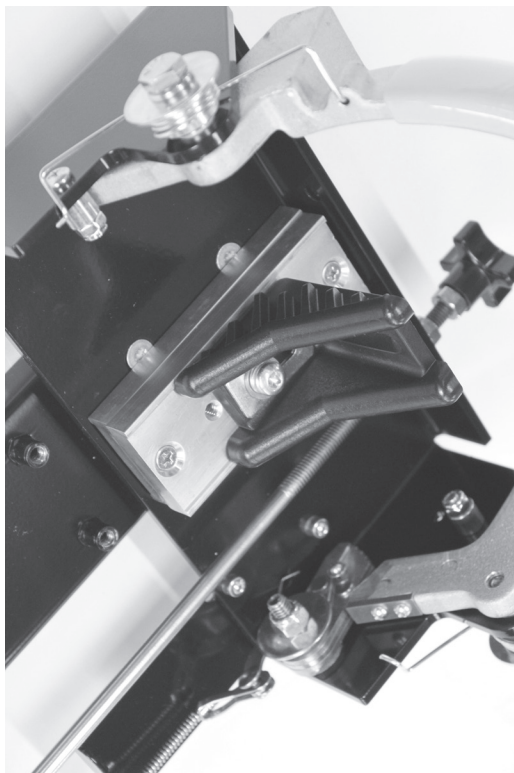

Spacer Installation Instructions:

1. Using a T-30 torx head screwdriver, remove the black plastic Cylinder Locator Bumper on your SCBA bracket and set aside.
2. Remove the two Phillips head screws holding your original Locator Bumper Spacer.
3. Stack this original spacer on top of your new kit spacer (see left).
4. Set these spacers, together, against the Upper Bracket assembly of your SCBA, positioned for your 5.5 cylinder. Secure using the longer Phillips head screws included with this kit.
5. Reattach Cylinder Locator Bumper, positioned for your 5.5 cylinder.
6. Continued with SCBA bracket adjustments as instructed in your SCBA manual.