

**OPTIONAL PULL RELEASE FOR QUIC-LOCK MECHANICAL BRACKET
MODEL QLM-U-OR
PARTS AND INSTRUCTION MANUAL**



The optional pull release for the Quic-Lock allows the release to be mounted on either side of the seat and at any height.


Model QLM-U-OR is made for the Quic-Lock SCBA bracket. For additional models or other combinations please contact us at 800-711-FIRE.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	1045-321-101	Release Cable Assembly (60-3/4")	1
2	1027-105-131	Yellow Tubing (10")	1
3	1010-175-131	Barbed Fitting	1
4	1027-105-135	Pull Release Bracket, Upper	1
5	1027-105-125	Pull Release Bracket, Release End	1
6	1027-105-129	Conduit With Crimped Fitting	1
7	9025-172006	Screw, 10-32 Hex Wsh Hd, Thd FRMG ZPS	2
8	1027-105-137	Push Nut (For 6MM Rod)	1
9	9013-252000	Nut, 10-32 Nylon Lock Nut	1
10	9020-101305	#6 x 5/16 SS Drive Screw	1
11	1045-320-169	Pull Release Knob	1
12	1045-320-185	Stop Sleeve	1
13	9010-391603	Set Screw, #8-32 x 3/16 Flat Point	1
14	1045-320-135	Bracket Release	1
15	9015-102512	Screw, 1/4-20 x 3/4 HH ZPS GR5	2
16	9114-112500	Plainwasher, 1/4 OD SS	2
17	9082-001209	Hairpin Cotter	1
18	9024-111900	Plainwasher #10	1
19	9080-001808	Clevis Pin, 3/16-1/2"	1
20	9010-502010	Screw, 10-32 x 5/8 Button Sockcap	1


QLM-U-OR Installation

Note: Numbers in parentheses refer to part number.


1. Before installing the QLM-U-OR, please confirm the QUIC-LOCK SCBA Bracket had been properly installed and that seat, SCBA and bracket are adjusted to your desired fit.
2. If you are upgrading a QLM-U, you must first remove the existing release assembly and cable. This can be done by removing the two 1/4-20 x 3/4 Hex Head Screws attaching the release assembly to the Elbow Mount bracket, then detaching the release cable from the cam rod by removing the cotter and clevis pins. If not, skip to Step 3.

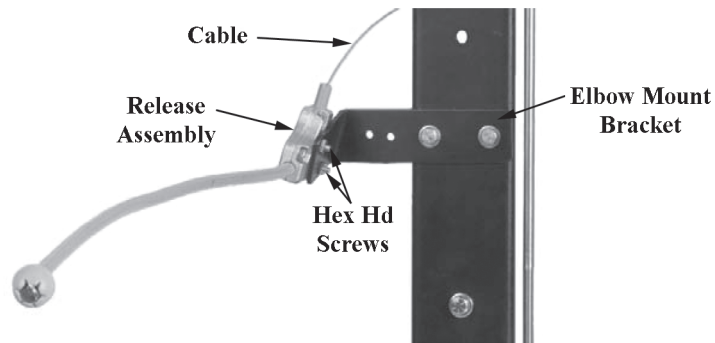

3. Attach the new Upper Pull Release Bracket, with conduit and pre-assembled release cable attached, to same holes in the Elbow Mount Bracket.

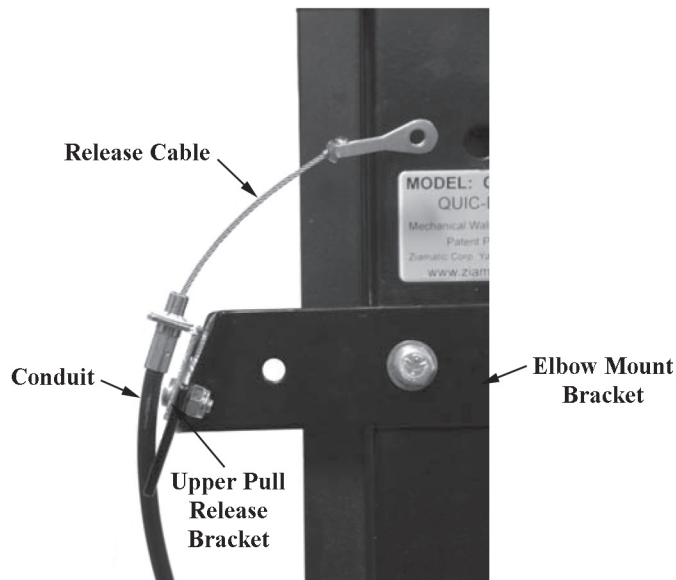


4. Attach the Pull Release Bracket (4), with Yellow Tubing (2) and Release Cable (1) to desired position on the seat frame. Drill two holes with a #19 drill (.166). Use two 10-32 x 3/8" threaded forming screws to attach the bracket to the seat frame. Note: A thicker seat frame may require a #18 drill bit (.169). Carefully run the cable and conduit around the seat and bracket without causing kinks in the cable or interference with the bracket's function.

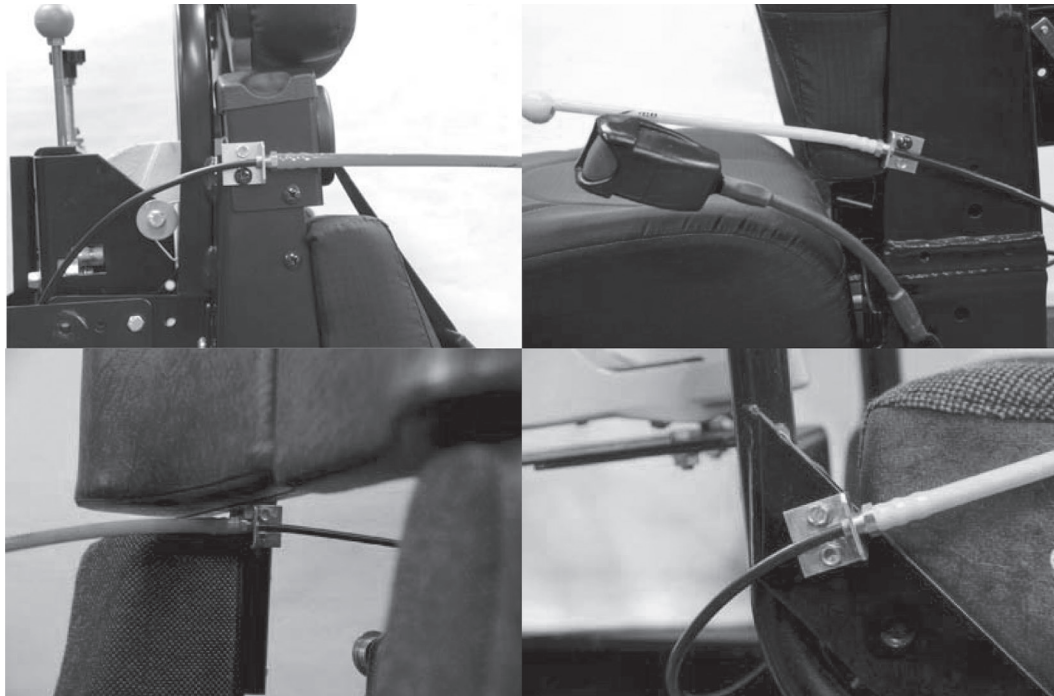

Potential Release Mounting Locations

5. Unlock the SCBA bracket for easy access to cam link assembly. Attach the cable to the cam using the 3/16 x 1/2" Clevis Pin (19), #10 washer (18), and the Hairpin Cotter (17).

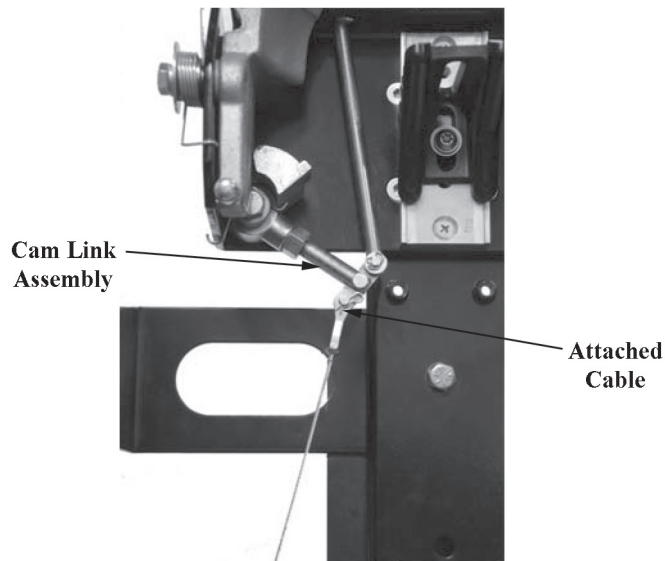

6. Confirm that the release is functioning properly to finalize install.



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

www.ziamatic.com

TOLL FREE: 800-711-3473

Copyright Ziamatic Corp. 6-12