QUIC-TOTE HOSE PACK

2010PM1

REV. 6-1-06

Hose Packing Instructions


- 1. Place the vinyl tote (model QTC) inside of the aluminum packing box (model QT-PB) (see Figure 1).
- 2. Unzip and open the vinyl tote so that it lays over the packing box (see Figure 2).
- 3. Connect the 2 hoses (model ZH-150) and place into the tote (see Figure 3).
- 4. Fold each side of hose so that it is uniform (see Figure 4).
- 5. Repeat the same packing process for the second layer (see Figure 5).
- 6. Fold tote back over the folded hose and zip close (see Figure 6).
- 7. Store with or without aluminum packing box.



FIGURE 2



FIGURE 3

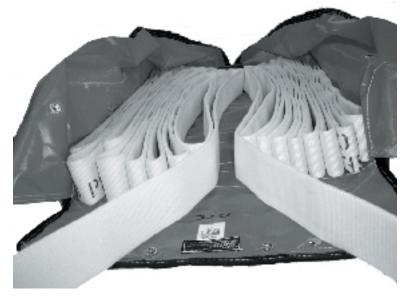

		WT./@
MODEL	DESCRIPTION	IN LBS.
QTC	Container Only	3.5
GW	Gated Wye 2-1/2" x Two 1-1/2"	4.0
ZH-150	150' Single Jacket Hose (2-75' Lengths)	29.6
TCH	Container with Hose	33.1
TCHN	Container, Hose & Nozzle	38.5
TCHNW	Complete Unit with QT-PB	43.9
QT-PB	Aluminum Packing Box	6.0

FIGURE 4



FIGURE 5



FIGURE 6

Ziamatic Corp.

www.ziamatic.com

Ziamatic Corp.TOLL FREE: 800-711-3473
10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Copyright Ziamatic Corp. 6-06