



**QUIC-CHOC® WHEEL BLOCK AND HOLDER
MODELS SAC-44-E AND SQCH-44-H**

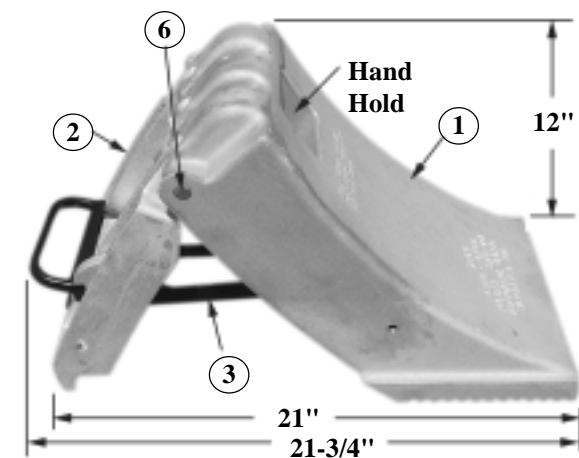

NEW "EASY-GRIP" Handle makes carrying, opening and placement a snap

The NEW Space-Saver Aluminum Wheel Choc, Model SAC-44-E, requires only 6" H x 12" W x 21" D area for storage. Choc may again be stored under fire or rescue vehicles.

The space-saver choc has been designed to comply with SAEJ348 and NFPA 1901-09.


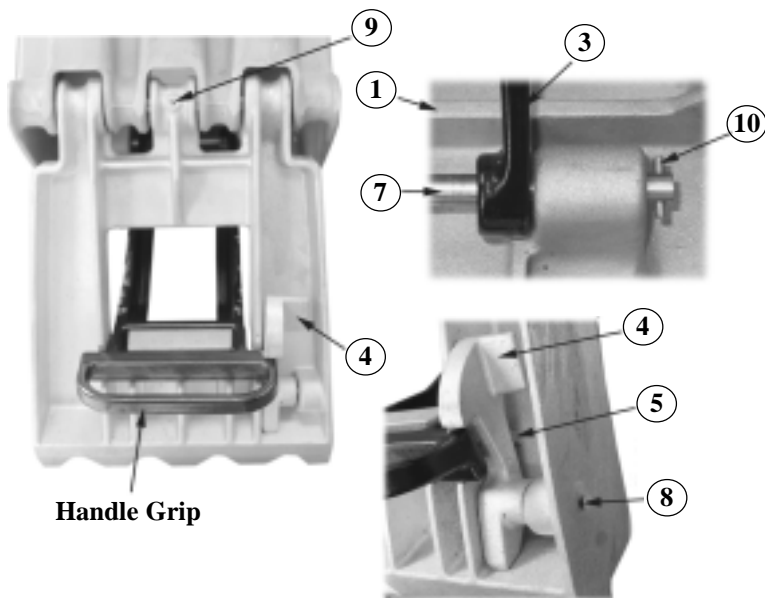


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	3025-144-101	Main casting	1
2	3025-144-102	Swing arm casting	1
3	3025-144-103	Cross bar casting	1
4	3025-144-104	Latch casting	1
5	3025-144-105	Spring, compression	1
6	3025-144-106	Shaft, 1/2" dia. x 9" L	1
7	3025-144-107	Shaft, 3/8" x 7-1/2" L	1
8	9140-102536	Spring pin, 1/4" x 2-1/4" L	1
9	9140-111220	Roll pin, 1/8" x 1-1/4" L	1
10	9140-111212	Roll pin, 1/8" x 3/4" L	2
12	2015-115-131	Label "Danger Keep Fingers"	1
13	3025-144-108	Label "Warning choc may..."	1
14	3025-000-105	Label "Warning use hand..."	1

To Place the Space-Saver Choc:

1. Push in on latch rod on the choc holder with the left hand while grasping the handle grip on the cross bar casting (3) with the right hand.
2. Pull the choc from the holder and lower the front edge of the main casting (1) to the ground while the left hand holds the swing arm casting (2) against the main casting.
3. Place the fingers of the left hand into the hand hold cut-out at the top of the main casting (1). Grasp the bottom corner of the swing arm casting (2) and pull back while lowering the choc to the ground.
4. Push down on the cross bar casting (3) until it locks firmly under the latch casting (4).
5. Lift choc, with two hands, using the holes in the main (1) and the handle on the cross arm (3) castings and place under vehicle.
6. Remove hand from main casting (1) and slide the choc against the wheel.

NOTE: We suggest that all pivot points be cleaned and sprayed with WD-40, or similar light, moisture-repellant silicon type lubricant, monthly.

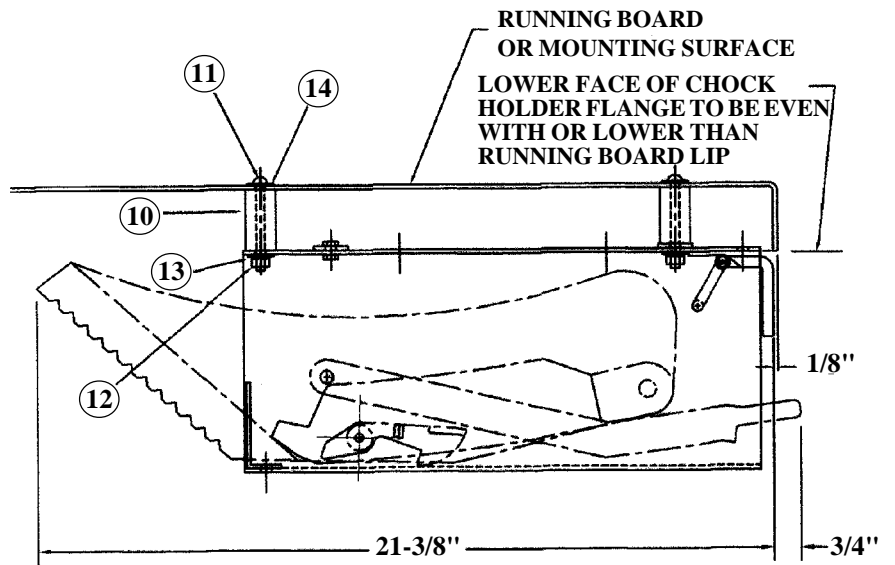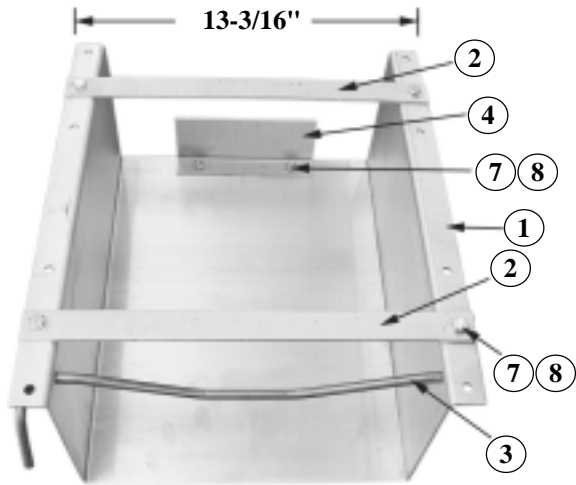



Model SQCH-44-H may be mounted under the vehicle running board as shown above.

Storing the Space-Saver Choc:

1. Grasp the choc by the handle grip in the cross arm casting (3) and slide the choc out from under the vehicle.
2. While holding the choc with the left hand in the hand hold of the main casting (1), depress the latch casting (4) with the right thumb while lifting up on the handle on the cross bar casting (3).
3. Maintain your hold on the main casting (1) and the handle on the cross bar casting (3) and slide the choc into the choc holder.
4. Make sure the locking rod (3 above left) falls into position to retain the choc.

MOUNTING CHOC HOLDERS:

- Use choc holder as pattern to mark hole locations.
- Drill 5/16" diameter holes for mounting.
- Cut tubes to length required - make sure choc has sufficient room to clear edge of running board or compartment when choc is removed.

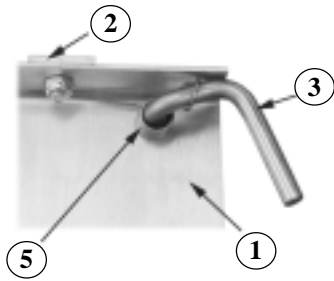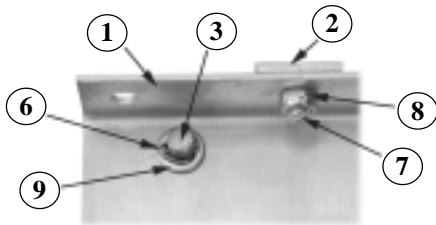

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	3025-205-101	Choc holder, aluminum	1
2	3025-205-102	Strap, aluminum	2
3	3025-205-103	Rod, 5/16" S/S	1
4	3025-205-104	Stop angle, aluminum	1
5	3025-205-105	Spring, torsion	1
6	9170-100610	Cotter pin, 1/16" x 5/8"	1
7	9010-102508	Screw, 1/4-20 x 1/2" hex hd.	6
8	9013-172500	Nut, 1/4-20 hex hd., lock	6
9	9114-103100	Narrow flat washer, 5/16" ID, SS	1
10	3025-000-110	Tube, plastic, 4" L	4
11	9010-232580	Screw, 1/4-20 x 5" L, slotted	4
12	9012-102500	Nut, 1/4-20, hex. hd.	4
13	9014-202500	Washer, 1/4" ID, lock	4
14	9014-112500	Washer, 1/4" ID, flat	4



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-8337 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Toll Free: 800-711-3473
www.ZIAMATIC.com

Copyright Ziamatic Corp. 12-10