NOZZLE BRACKET MOUNT - MODEL NBM-1 For Pistol Grip Nozzles - Rectangular Opening

INSTALLATION INSTRUCTIONS:

Mounting on horizontal surface:

1. Determine where assembly will be mounted.

NOTE: Complete assembly can be mounted at various angles on the holster bracket (Item 4).

- a. Bracket (Item 4) may be mounted against holster casting (Item 2 or 3) using fasteners (Items 8 & 9).
- b. Bracket (Item 4) may also be mounted away from holster casting using spacers (Item 5) and fasteners (Items 7 & 9).
- 2. After attaching bracket (Item 4) to either of the holster castings (Item 2 or 3) complete assembly of the mounting device.
 - a. Place holster liner (Item 1) between holster front (Item 2) and holster back (Item 3) castings.
 - b. Place bolt (Item 6) through holes (4 places) in holster front and back (Items 2 & 3) castings and attach nut (Item 9).
 - c. Place handle of pistol grip nozzle into top opening of the holster liner (Item 1) and tighten fasteners (Items 6 & 9).

NOTE: Tighten until handle of pistol grip is snug but not too tight to remove easily.


- 3. Place complete assembly back in desired mounting area, with pistol grip nozzle, to check for clearance.
 - a. Mark hole locations on mounting surface and drill holes for 1/4-20 fasteners.
 - b. Attach complete assembly using 1/4-20 fasteners (not supplied).


Mounting on vertical surface:

- 1. Place holster back on front (Item 2 or 3) against mounting surface where complete assembly will be mounted.
 - a. Slide handle of pistol grip nozzle into the top of the holster liner (Item 1) and place liner into holster back or front and hold against mounting surface, checking to make sure the nozzle will not hit against mounting surface.
 - b. Spacers (not supplied) may be required between holster casting and mounting surface.
 - c. After determining where complete assembly will be mounted:
 - 1. Hold the holster back or front casting against the mounting surface and mark 3 hole locations (through casting) on the mounting surface.
 - 2. Drill holes for 1/4-20 fasteners.
- 2. Mount the holster back or front casting to the mounting surface with 1/4-20 fasteners (not supplied).
- 3. Assemble bracket mount.
 - a. Place holster liner (Item 1) between holster front (Item 2) and holster back (Item 3) castings.
 - b. Place bolt (Item 6) through holes (4 places) in holster front and back (Items 2 & 3) castings and attach nut (Item 9).
 - c. Place handle of pistol grip nozzle into top opening of holster liner (Item 1) and tighten fasteners (Items 6 & 9).

NOTE: Tighten until handle of pistol grip is snug but not too tight to remove easily.

BILLOFMATERIAL						
ITEM	QTY.	PART NO.	NAME	DESCRIPTION		
1	1	3070-105-125	Holster Liner	Neoprene		
2	1	3070-105-105	Holster Front	Aluminum Casting		
3	1	3070-105-110	Holster Back	Aluminum Casting		
4	1	3070-105-115	Holster Bracket	Metal Stamping		
5	3	3070-105-120	Spacer	Aluminum		
6	4	9010-102524	Hex Hd Bolt	1/4-20 x 1-1/2 Lg		
7	3	9010-152540	Ft Hd Screw	1/4-20 x 2-1/2 Lg		
8	3	9010-152516	Ft Hd Screw	1/4-20 1" lg		
9	7	9012-132500	ESNA Hex Nut	1/4-20		

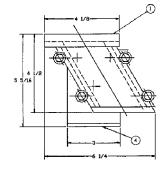

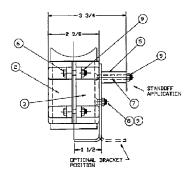

NOZZLE BRACKET MOUNT - MODEL NBM-1-TFT For TFT Pistol Grip Nozzles - Oval Opening

INSTALLATION INSTRUCTIONS:


NOTE: Follow instructions on reverse side adding the following to:


Mounting on horizontal surface:

2. b. Spacer (Item 10) goes between castings (4 places).

Mounting on vertical surface:

3. b. Spacer (Item 10) goes between castings (4 places).

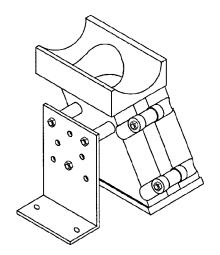

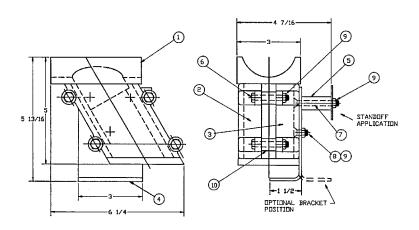

BILLOFMATERIAL							
ITEM	QTY.	PART NO.	NAME	DESCRIPTION			
1	1	3070-110-125	Holster Liner	Neoprene			
2	1	3070-105-105	Holster Front	Aluminum Casting			
3	1	3070-105-110	Holster Back	Aluminum Casting			
4	1	3070-105-115	Holster Bracket	Metal Stamping			
5	3	3070-105-120	Spacer	Aluminum			
6	4	9010-102532	Hex Hd Bolt	1/4-20 x 2 Lg			
7	3	9010-152540	Ft Hd Screw	1/4-20 x 2-1/2 Lg			
8	3	9010-152516	Ft Hd Screw	1/4-20 1" lg			
9	7	9012-132500	ESNA Hex Nut	1/4-20			
10	4	3070-110-130	Spacer 11/16 Lg	Aluminum			



www.ZIAMATIC.com CALLTOLLFREE: 800-711-FIRE