

QUIC-RELEASE® FIRE EXTINGUISHER HOLDER - 5 LB. MODEL QR-FEH-1-_ PARTS AND INSTRUCTION MANUAL

Safely store a fire extinguisher inside or outside of the crew area with this SAE-J3043 compliant bracket.

Features:


- Designed, engineered, and tested specifically for use in ambulances and other moving vehicles, better protecting both patients and personnel
- Two-piece adjustable bracket secures one 5 lb. fire extinguisher.
Models: Kidde Pro Series 340, Amerex Model B402/B500, Sentry Model AA05S-1, or Badger Model 5MB-6HB
- Band clamp firmly hugs the cylinder with virtually no rattle
- Quick-release buckle allows for fast and easy access to the extinguisher
- Specially-designed pull pin ensures latch stays closed for maximum cylinder security
- Soft foam pads protect and cushion cylinder
- Easy to clean and disinfect—no fabric to harbor bloodborne pathogens
- Easy to visually and physically inspect fire extinguisher
- Mounts horizontally or vertically to any flat surface
- Third-party tested to exceed safety standards

Specs:


- Stainless steel
- 12-1/4" or 13-3/4" L x 3" W x 4-1/8" D (not including fire extinguisher)
- Complies with SAE-J3043, AMD Standard 003, NFPA, and GSA KKK specification when used as recommended.
- Complies with OSHA and insurance safety regulations.

MODEL	DESCRIPTION	WT. / IN LBS.
QR-FEH-1-A	For use w/ Amerex B402 & B500	2.45
QR-FEH-1-B	For use w/ Badger 5MB-6H	2.45
QR-FEH-1-K	For use w/ Kidde Pro Series 340	2.45
QR-FEH-1-S	For use w/ Sentry AA05S-1	2.45



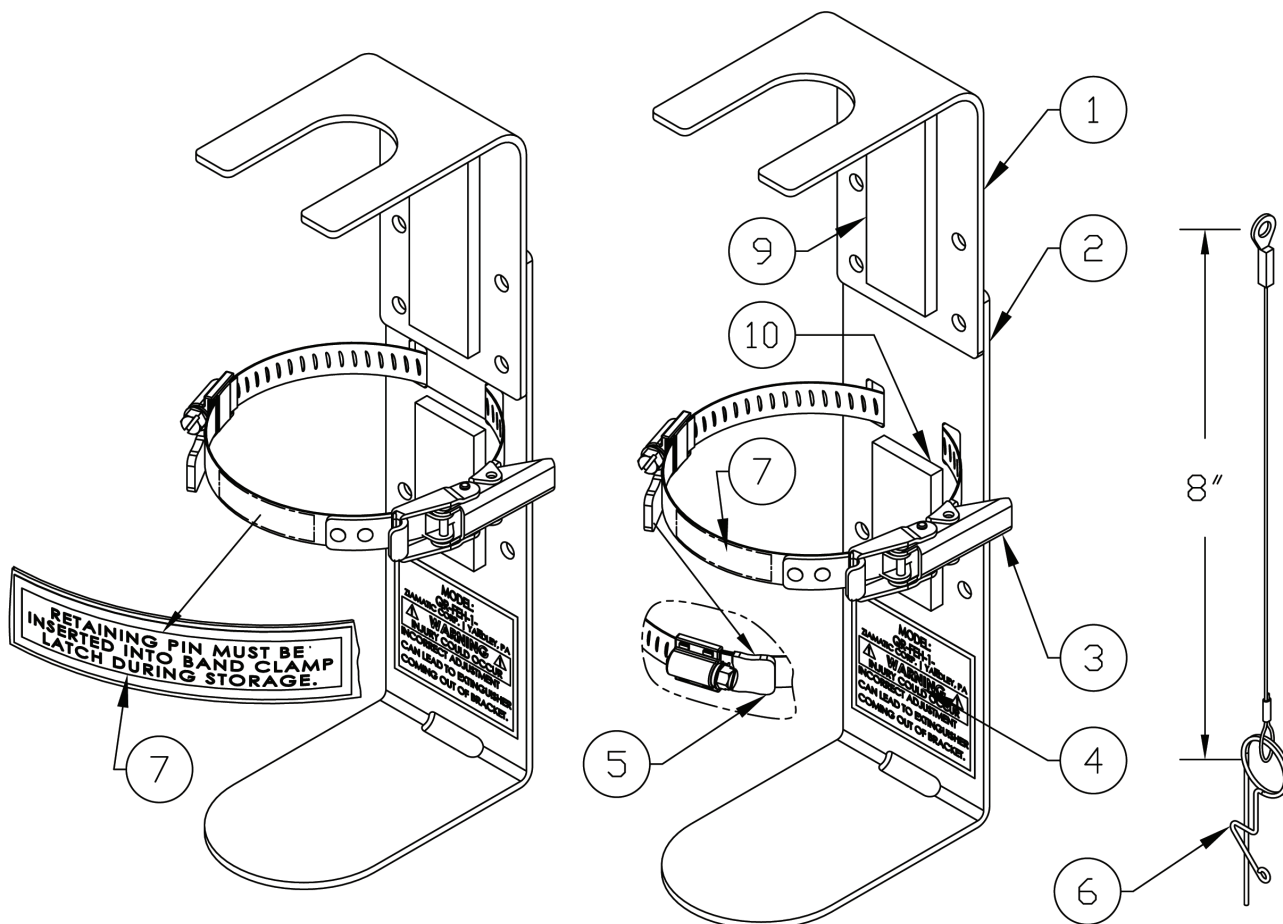


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	3030-300-105	RETAINER BRACKET	1
2	3030-300-101	BASE BRACKET	1
3	3030-300-107	BAND CLAMP	1
4	3030-300-111	LABEL, MODEL QR-FEH-1-A	1
	3030-310-111	LABEL, MODEL QR-FEH-1-K	
	3030-315-111	LABEL, MODEL QR-FEH-1-B	
	3030-320-111	LABEL, MODEL QR-FEH-1-S	
5	3030-300-113	BAND CLAMP CAP	1
6	3030-300-117	RETAINING PIN / LANYARD ASSY	1
7	3030-300-119	LABEL, RETAINING PIN	1
9	3030-300-121	FOAM PAD, 3-3/4" x 1-1/4" x 1/4"	1
10	3030-300-123	FOAM PAD, 2-1/2" x 1-1/4" x 1/4"	1

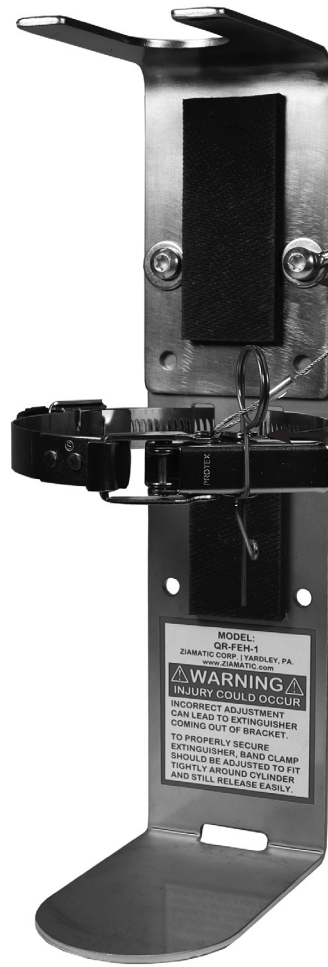

Attach Lanyard Assembly here.
Lanyard Assembly tab serves as flat washer.

Slide Retaining Pin through hole in Band Clamp latch to secure.

Note that two fasteners sets must go through the bottom holes of the Base Bracket and that two fastener sets must go through the shared holes of the Retainer Bracket and the Base Bracket.

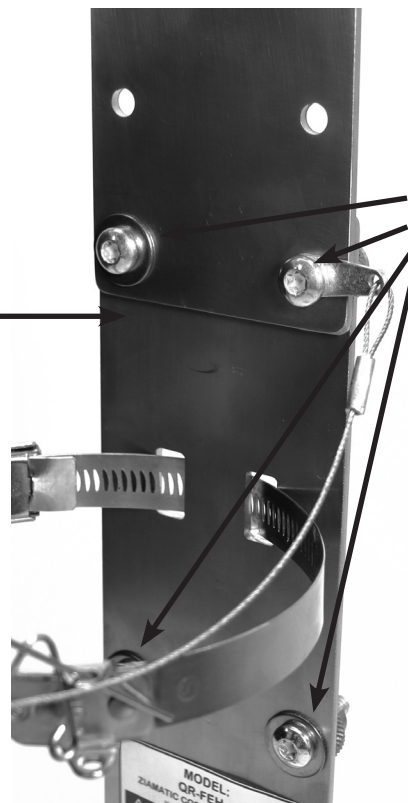

Mount at four points with Grade 5, 1/4" hardware, 4 places.

WARNING: QM-FEH-1 is to be secured with a minimum four Grade 5, 1/4” fasteners with washers. Failure to do so may result in non-compliance with safety standards.

WARNING: Be careful not to kink the Band Clamp (3) during mounting procedures.

WARNING: Band Clamp is factory set. Do not adjust adjustment screw. It is permanently bonded with adhesive.

Mounting Instructions:

Mount horizontally or vertically at four points to any flat surface using a minimum of Grade 5, 1/4” fasteners with washers (see Page 3). Failure to meet these requirements may result in non-compliance with safety standards.

Operation Instructions:

1. To stow the extinguisher:

- Place the extinguisher against the Base Bracket (2), inside of the Band Clamp (3) and resting on the footplate. The neck of the extinguisher should sit fully inside the Retainer Bracket (1).
- Hook together and fully close the Band Clamp latch. Slide the Retaining Pin (6) through the small hole in the Band Clamp latch to secure. Failure to use the Retaining Pin may result in non-compliance with safety standards.

2. To retrieve the extinguisher:

- Remove the Retaining Pin (6) and open the Band Clamp (3) latch.
- Pull extinguisher free from the Retainer Bracket (1).



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

www.ziamatic.com
TOLL FREE: 800-711-3473

Copyright Ziamatic Corp. 3-22