
QUIC-RELEASE® Horizontal Strapless Cylinder Bracket Model QR-D-2/H


PARTS AND INSTRUCTION MANUAL

3030PM15


Rev. 1-16-23



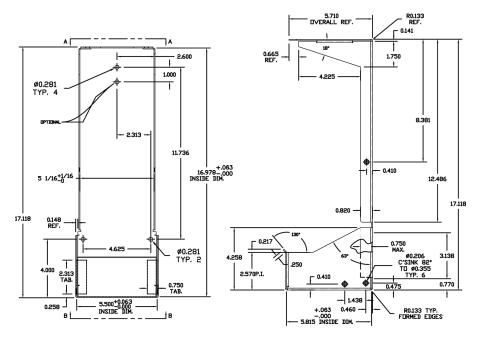


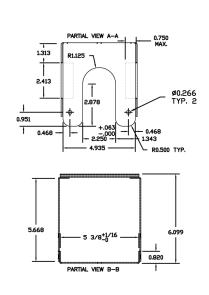

MODEL	DESCRIPTION	WT./@ IN LBS.
MODEL	DESCRIPTION	III LDS.
QR-D-2/H	Horizontal Strapless Cylinder Bracket	5.8

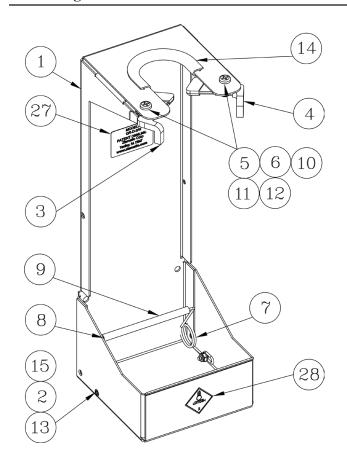

ISOMETRIC VIEW

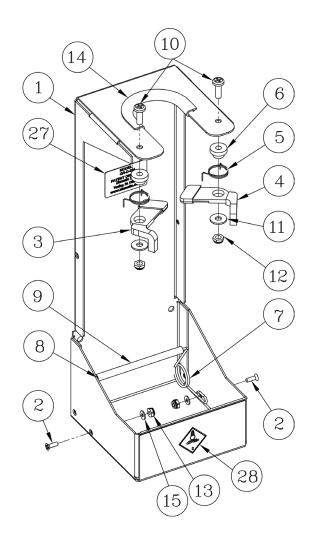

EXPLODED VIEW

ITEM			
NO.	PART NO.	DESCRIPTION	QTY.
1	3030-113-101	D-CYL. BRACKET FORM	1
2	9110-361608	#8 X 1/2" FLAT HD, SOCKET HD. S.S.	2
3	3030-113-109	D-CYL. BRACKET CAM (LEFT)	1
4	3030-113-111	D-CYL. BRACKET CAM (RIGHT)	1
5	3030-113-113	D-CYL. BRACKET CAM SPRING	2
6	3030-113-115	D-CYL. BRACKET CAM SPACER	2
7	3030-113-117	D-CYL. BRACKET RETURN SPRING RH	1
8	3030-113-119	D-CYL. BRACKET RETURN SPRING LH	1
9	3030-113-121	D-CYL. BRACKET SPRING JACKET	1
10	9110-352512	BUTTON HD CAP, 1/4"-20 X 3/4 S.S.	2
11	9114-112500	WASHER, 1/4" FLAT S.S.	2
12	9113-172501	LOW PRO. NUT, 1/4-20, NYLON LOCK S.S.	2
13	9113-251601	LOW PRO. NUT, #8-32, NYLON LOCK S.S.	2
14	3030-113-123	VINYL EDGE GUARD	1
15	9114-111600	#* FLAT WASHER	2
27	3030-111-131	LABEL, PATENT #, QR-D-2/H	1
28	3030-112-117	LABEL, OXYGEN WARNING	1

Operating Instructions

To store standard, jumbo, and steel "D" cylinders:

- 1. Place bottom of cylinder against Return Spring Assembly (78).
- 2. Lower cylinder through the latches (3 & 4), until both click into the locked position.
- 3. Check that the cylinder is now secure against the latches.

Note: For additional security, extra holes are provided in D-Cyl. Bracket Form (1) to add a strap if desired.

To remove cylinders:

- 1. Slightly press cylinder against the D-Cyl. Bracket Form (1) to relieve pressure on the latch.
- 2. Squeeze latch handles inward, toward each other, to disengage the latches.
- 3. Lift the cylinder free of the latches and remove from bracket.

Mounting Instructions

- Mount horizontally.
- Brackets may be mounted side by side.
- Minimum of 3 mounting points using 1/4" screws.
- Mounting surface must be able to withstand a pull-out force exceeding strength of screws.

Ziamatic Corp.

www.ziamatic.com

TOLL FREE: 800-711-3473

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401