ZICO®

Vehicle Cooling Unit Model: VCU-36, VCU-72 & VCU-36-A

PARTS AND INSTRUCTION MANUAL

2075PM1

Rev. 10-2-23

SPECS FOR VEHICLE COOLING UNITS:

- 1/16" Diameter Holes
- 83 Holes per 3 Foot Section
- 140 Degree Spray Pattern
- Connection: 1 1/2" IVH
- 100 PSI Max Pressure at VCU Connection




Scan for more information



MODELS:




Model: VCU-36
Single unit Complete

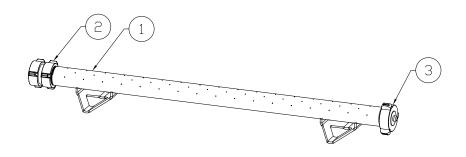

Item No.	Part Number	Desciption	Qty
1	2075-005-101	VEHICLE COOLING UNIT WELDMENT, 36 INCH	1
2	2075-005-107	ADAPTER, DOUBLE FEMALE SWIVEL, 1 1/2 NPT TO 1 1/2 NH	1
3	2075-005-109	ROCKER LUG END CAP, 1 1/2 NPT	1

Model: VCU-72
Double unit complete

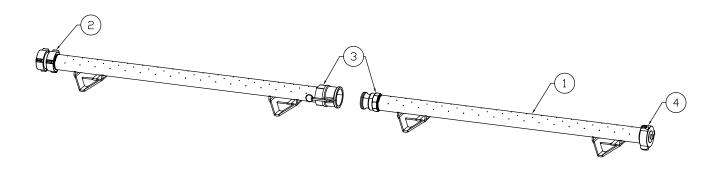

Item No.	Part Number	Description	Qty
1	2075-005-101	VEHICLE COOLING UNIT WELDMENT, 36 INCH	2
2	2075-005-107	ADAPTER, DOUBLE FEMALE SWIVEL, 1 1/2 NPT TO 1 1/2 NH	1
3	2075-005-111	QUICK CONNECT, 1 1/2 NPT	1
4	2075-005-109	ROCKER LUG END CAP, 1 1/2 NPT	1


Model: VCU-36-A

Single adapter Unit

(A total of five single units can be joined together, four added to VCU-36 or three added to VCU-72)

To add VCU-36-A:

- 1. Remove the end cap from existing VCU.
- 2. Install the female side of the quick connect(2) with thread sealant to the end that you removed the end cap from.
- 3. Install the end cap to the open end of the VCU-36-A with thread sealant

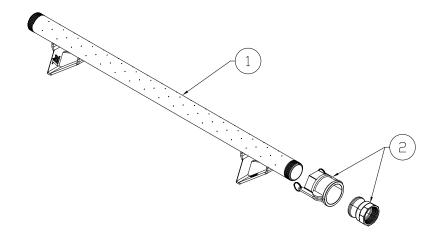

Item No.	PArt Number	Description	Qty
1	2075-005-101	VEHICLE COOLING UNIT WELDMENT, 36 INCH	1
2	2075-005-111	QUICK CONNECT, 1 1/2 NPT	1

• Operation

To Use:

- 1. Connect 1-1/2" hose to the swivel adapter (2) until tight.
- 2. Confirm End Cap (3) is tight, if your model has the quick connect, confirm it is fully engaged and locked.
- 3. Charge line with water only, not exceeding 100 PSI at VCU connection.
- 4. Slide the cooling unit under the vehicle.

To Stow:

- 1. Discharge water line and allow pressure to dissipate
- 2. Remove from under vehicle
- 3. Disconnect hose from swivel adapter (2)
- 4. Allow water to drain completely before stowing in compartment



www.ziamatic.com TOLL FREE: 800-711-3473

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Copyright Ziamatic Corp. 7-23