



QUIC-RELEASE® MULTIVERSAL BRACKET MODEL QR-MV

NOTE: Running end of strap "A" goes under latch and back through front of latch between retainer and thumb release.

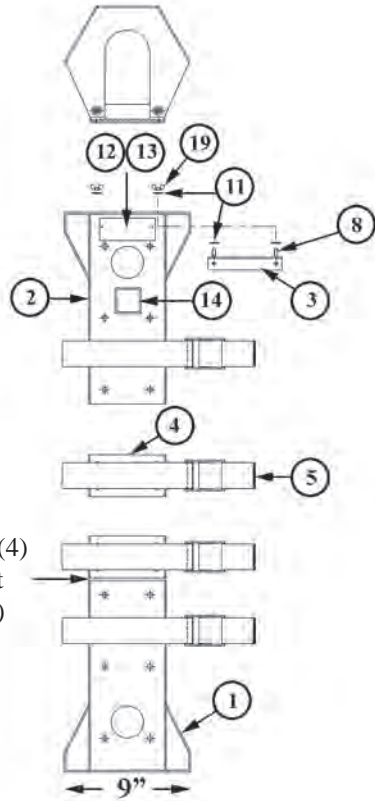

Install lower Strap Support (4) so that lower edge is against upper edge of Base Plate (1)

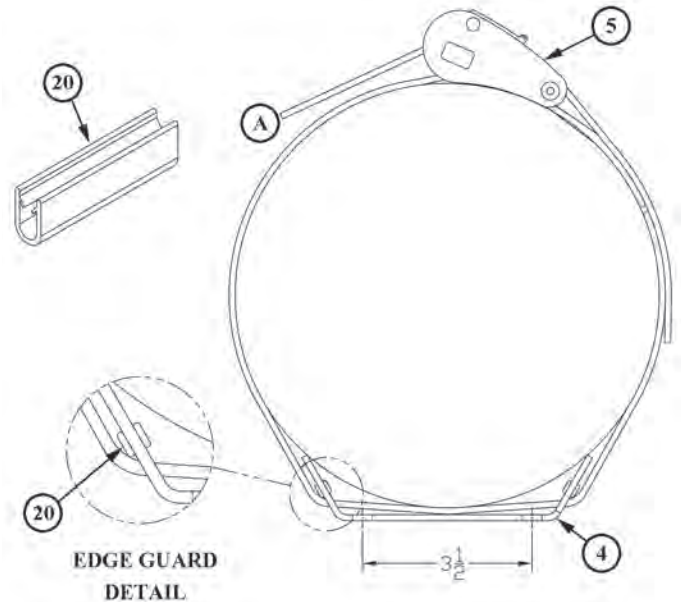

ITEM NO.	DESCRIPTION	PART NUMBER	PIECES REQUIRED
1	Base Plate Assembly	3030-135-105	1
2	Retainer Assembly	3030-135-110	1
3	Stop	3030-000-109	1
4	Support Strap	3030-135-120	2
5	Strap & Buckle Assembly	3030-135-135	4
8	1/4" x 3/4" Hex Head Bolt	9010-102512	2
11	1/4" Flat Washer	9014-112500	4
12	#4 Drive Screw	9020-101103	2
13	Label "CAUTION/MODEL NO."	3030-135-140	1
14	Label "KKK"	3030-000-115	1
19	1/4-20 x 3/4" Dia. Thumbnut	9012-352500	2
20	Edge Guard, 2"	3030-135-145	8



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

www.ziamatic.com

TOLL FREE: 800-711-3473