
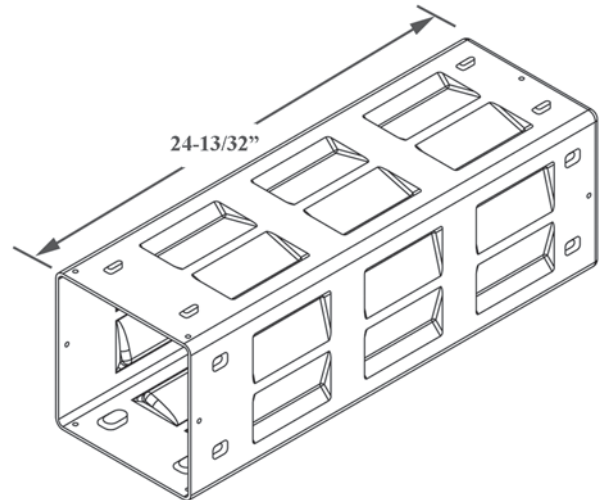


QUIC-STORAGE® RACK

PARTS AND ASSEMBLY INSTRUCTIONS

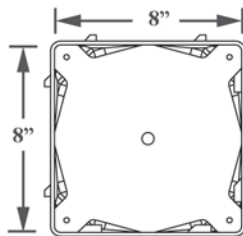

ITEM NO.	DESCRIPTION	YELLOW PART NUMBER	BLACK PART NUMBER	PART NUMBER	QTY.
1	Box	1090-300-105	1090-305-105		1
2	10-24 x 3/8" hex head m/s			9010-441906	4
3	10-24 x 3/4" hex head m/s			9010-441912	4
4	10-24 hex head nut			9012-101900	8
5	#10 lock washer			9114-201900	8
6	Flatwasher, #10			9014-111900	8
7	10-24 x 5/8" hex head m/s			9010-441910	4

To Assemble in Series of 2 or more Units for Horizontal Placement:


1. If you are assembling racks one above the other, start by loosely attaching both units together using the 10-24 x 5/8" m/s with flatwashers, lock washers, and hex nuts. The two boxes are joined using the two 15/64 holes, two thirds back on the box.

2. Next choose the appropriate hardware to attach the front ends of the boxes. The longer (3/4") machine screws will be used if you are also attaching the Restraint straps (model PACSR-RS). The next size machine screw (5/8") is needed if you are only attaching box to box with no strap. Start from the bottom slots on the box and work your way up, allowing the ability to align the front end of the boxes being attached together. Once aligned, tighten front edge hardware and then tighten the 10-24 x 5/8" m/s.

To assemble for Vertical Placement:


3. If you are using boxes in series of two or more, complete your vertical assembly before continuing horizontally. Once you're ready for horizontal attachment follow steps in 1 by attaching side holes, two thirds back, loosely before attaching front slots. Once aligned, tighten securely.

**Shown with optional straps*

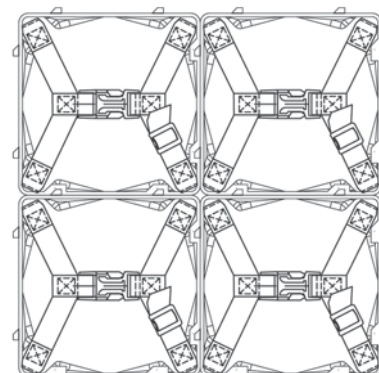

QUIC-STORAGE® RACK RESTRAINT STRAP

MODEL PACSR-RS

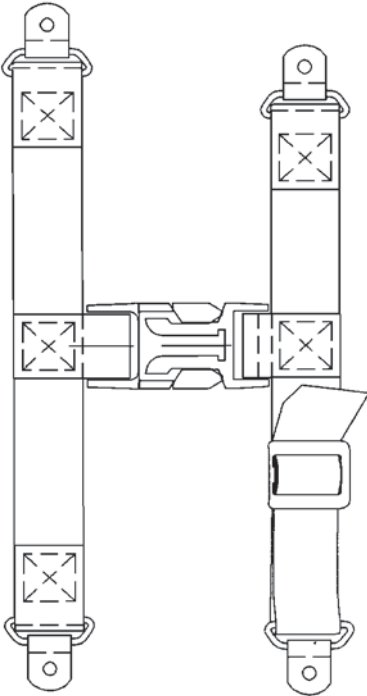

NEW restraint strap prevents accidental release of SCBA air cylinder, while providing immediate access when needed.


NFPA 1901-96 Section 13-5.5 & 13-5.6 require restraint straps for SCBA air cylinder storage racks. The straps are designed to keep the air cylinder in place in the event of an accident or roll-over.

The strap assembly bolts into place utilizing the four corner mounting slots. Order with new storage racks or retrofit onto existing units.

Use with Model PACSR storage racks.

Mounting Instructions:

1. Restraint strap may be used with any model PACSR storage rack.
2. Insert hex head bolts and flatwashers from outside of box, top and bottom.
3. Position strap assembly in front of box with the adjustable strap on the right side.
4. "D" rings go on the inside of the box.
5. Attach the flatwasher, lock washer, and nut to the screw and tighten.
6. Adjust the right strap as needed to position the buckle over the end of the cylinder valve.

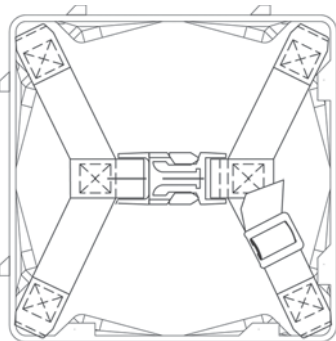

**If you are using a single PACSR with a restraint strap, use the 10-24 x 3/8 hex hd. screw to attach the strap.*

PART NO.	DESCRIPTION	QTY.
1090-250-105	Restraint strap assembly	1
9010-441906	10-24 x 3/8" hex head screw	4
9012-101900	10-24 hex head nut	4
9114-201900	#10 lock washer	4
9014-111900	Flatwasher	8



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

www.ziamatic.com

TOLL FREE: 800-711-3473